


Detailed installing instruction for LED badge 7x24

English, page 2 - 5

Detaljeret installations instruktion til LED skilt med 7x24 dioder


Dansk, side 6 - 10

1. Uninstall all the software which you have installed from the CD. You can reference attached pic.001, the item which have been marked in red line should be uninstalled.

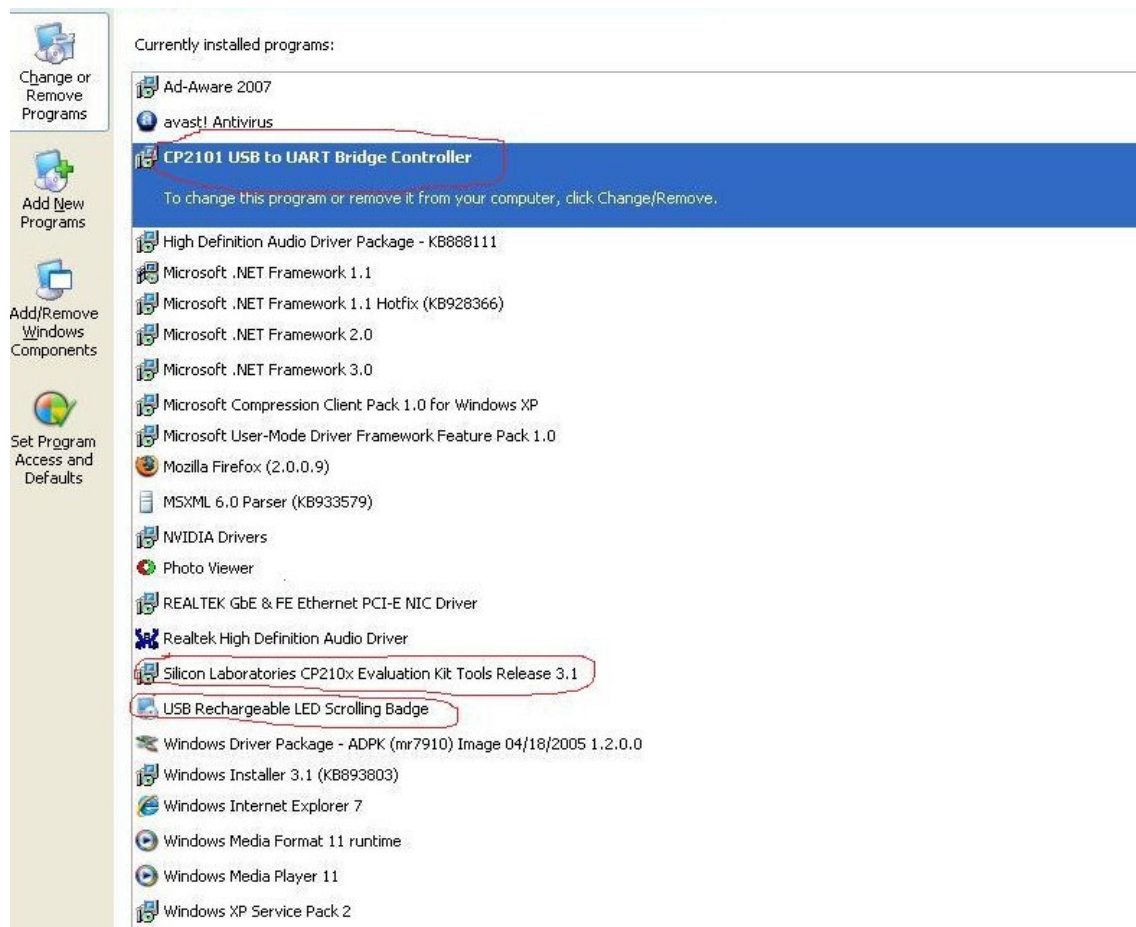


pic.001

2. Install software. install 'SETUP.exe' first

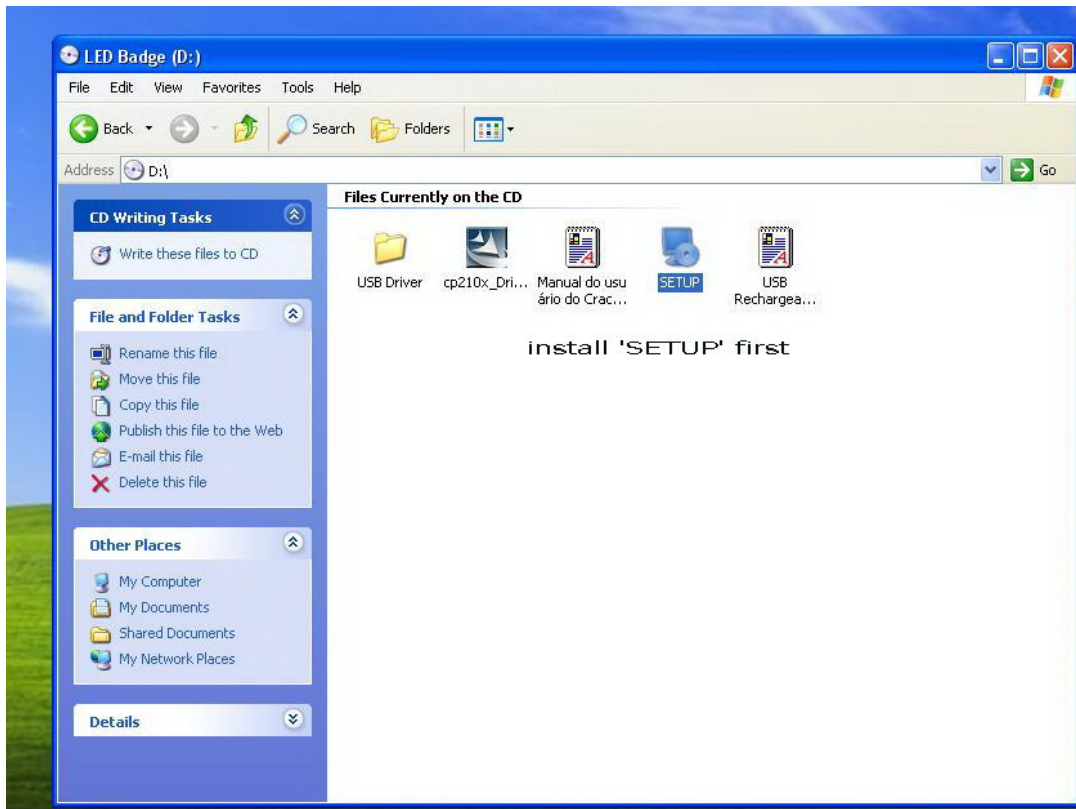

pic.002

3. Install 'cp210x_driver'.

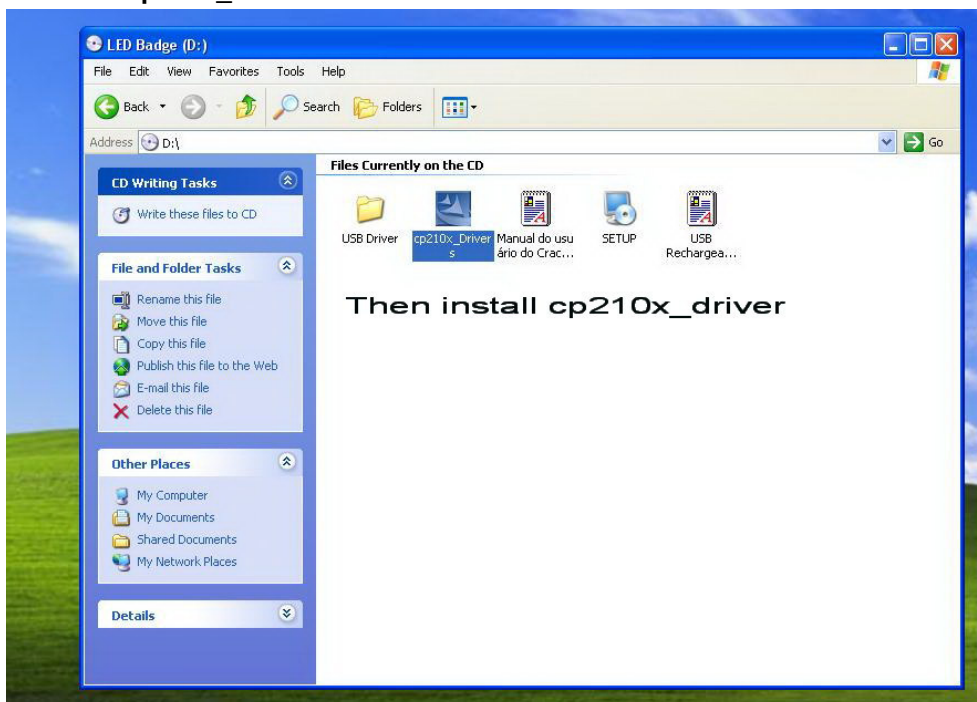


pic.003

4. When you complete the installation, please connect LED badge to computer by USB cable. **Remember that you should keep the CD in ROM drive**, it is also useful for following step. When connect to computer, a window will show like pic.4, please chose option3--'No, not this time', then it will search the driver automatic. When finished, another window will show like pic.5, just treat it same as last step. If the installation is OK, some information like pic.6 will show on computer notification area at right down corner.



pic.004

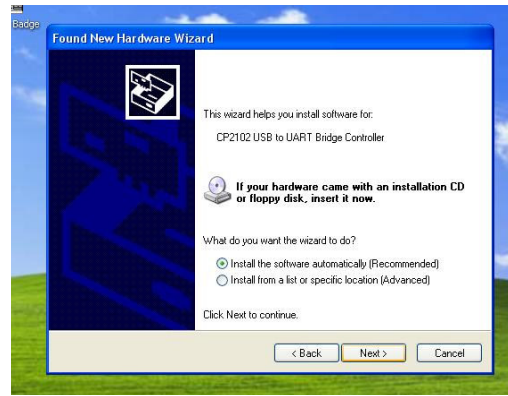

pic.005




pic.006

5. At last you can click the icon 'send to badge' on desktop to use it. Write in the message, and click 'Send'.




6. If you use this product on Vista OS, we need another set of the compatibility.

please right click the program icon on your desktop, come to the 'Compatibility' item, and select the compatibility mode as attached picture show. Then click 'OK', run the program again.

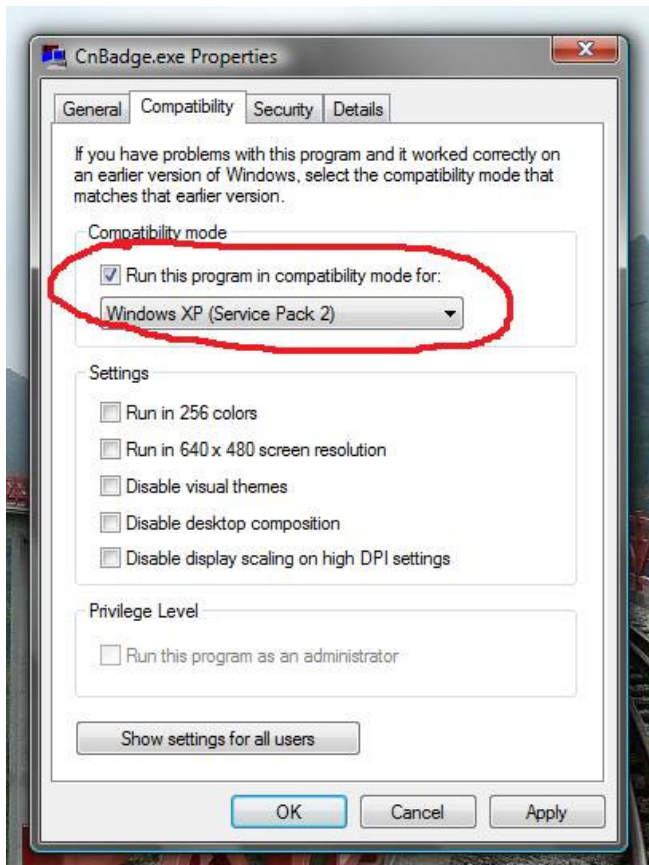


1. **Afinstaller software** du allerede har installeret fra medfølgende CD. De tre programmer som er markeret med en rød ring på billede 1 skal afinstalleres. you have installed from the CD.

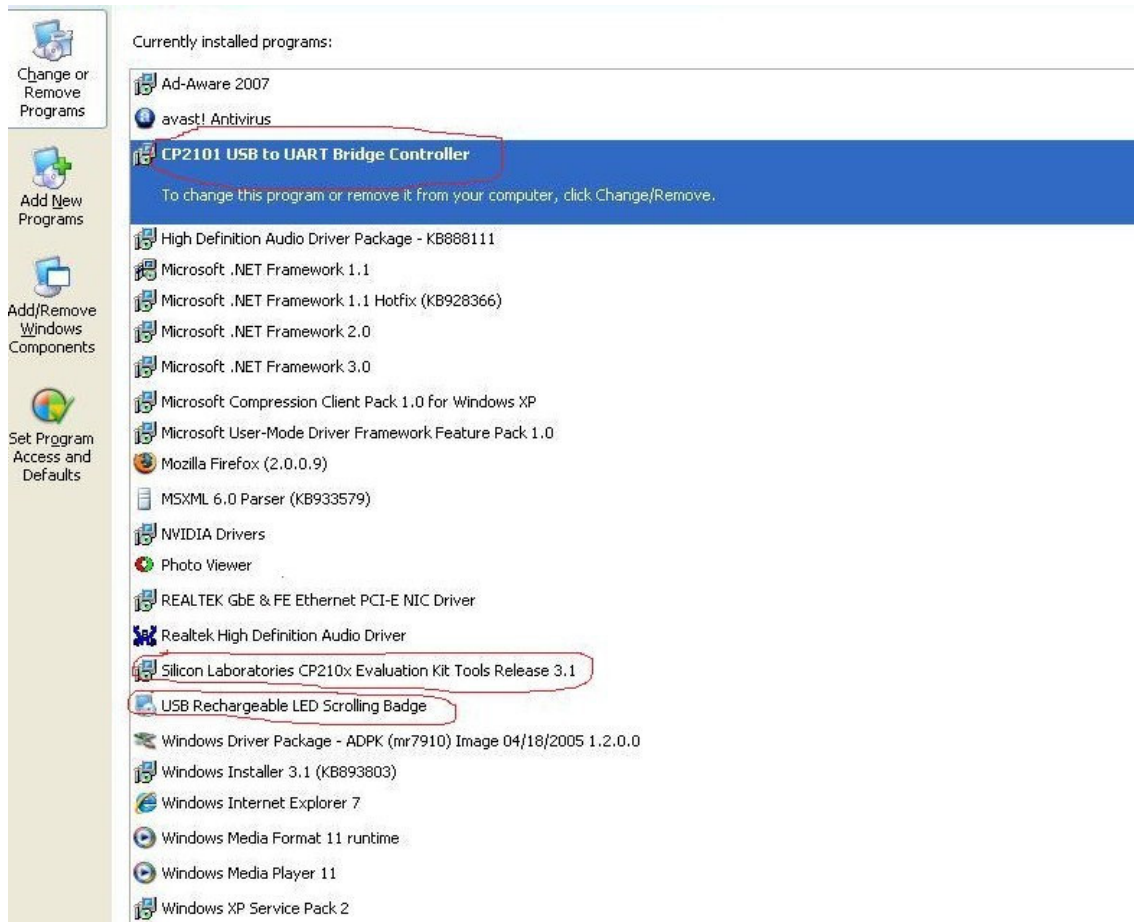


billede 1

2. Installer software. Installer 'SETUP.exe' først

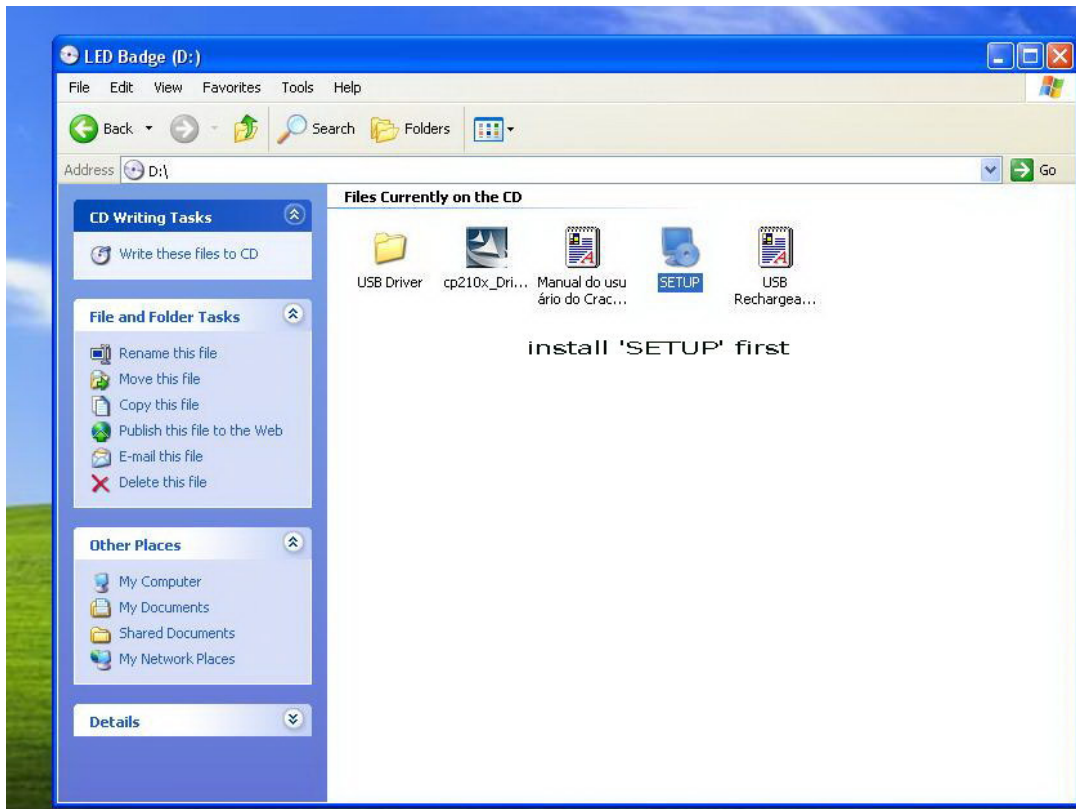


billede 2

3. Installer "cp210x_driver"

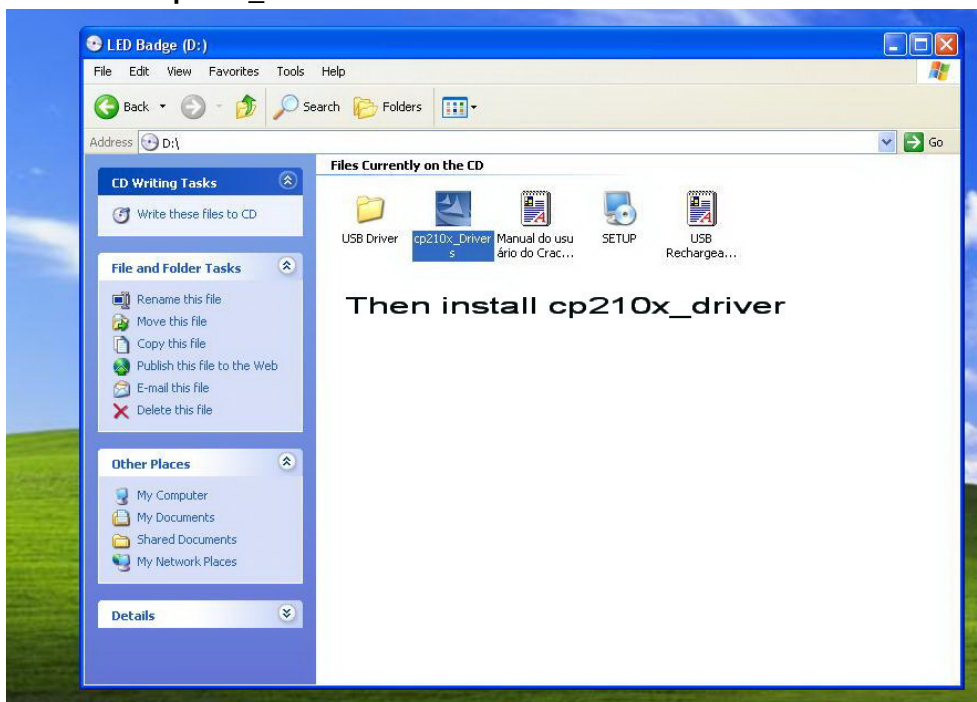


billede 3

4. Efter gennemført installation, tilslut LED skiltet til computeren, ved hjælp af det medfølgende USB kabel. **Lad CD'en side i CD-rom drevet**, den skal også bruges til følgende trin. Når LED skiltet er tilsluttet, åbner et nyt vindue, se billede 4. Vælg mulighed nummer 3, "No, not this time", hvorefter computeren automatisk vil søge efter driveren.

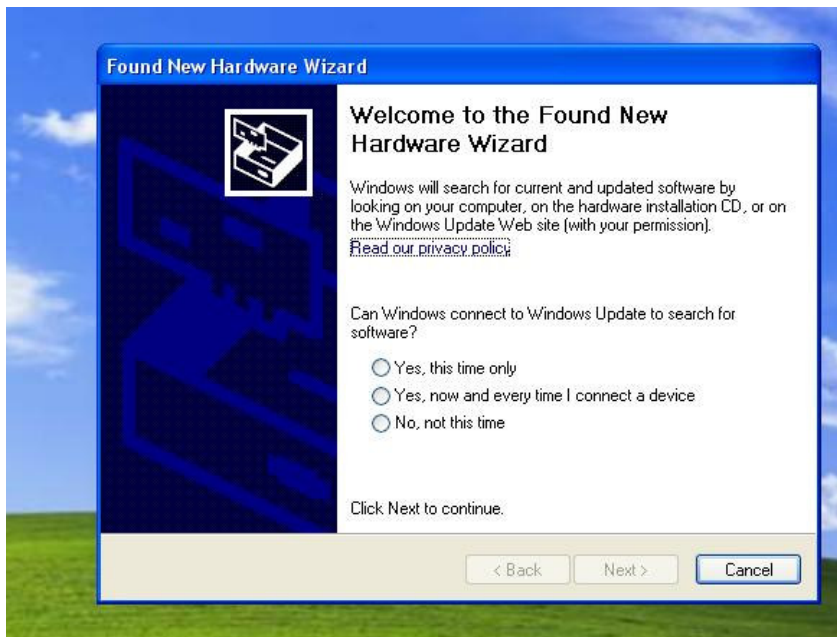

billede 4

5. Herefter åbner et nyt vindue, se billede 5, vælg "Install the software automatically".

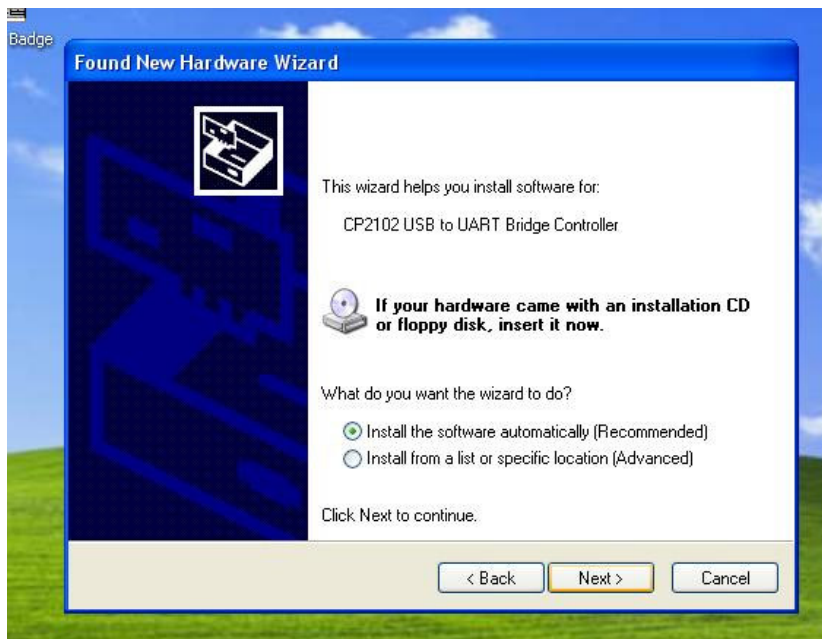

billede 5

6. Hvis installationen er gennemført vises dette i nederste højre hjørne, se billede 6.



billede 6


7. Til sidst skal du klikke på det nye ikon “send to badge” på dit skrivebord. Skriv ønsket tekst i et eller flere felter, vælg eventuelt hastighed og retning for teksten. Se billede 7. Klik herefter på send. LED skiltet vil slukke mens der overføres. Overførslen tager cirka ½ minut.



billede 7

8. Hvis LED skiltet skal bruges sammen med Windows Vista, skal du ændre kompatibiliteten for programmet.

Højre klik på program ikonet og vælg fanen “Compatibility”. Vælg at programmet skal køres i kompatibilitets tilstand for Windows XP (Service Pack 2), se billede 8. Klik på “Ok” og start programmet igen.

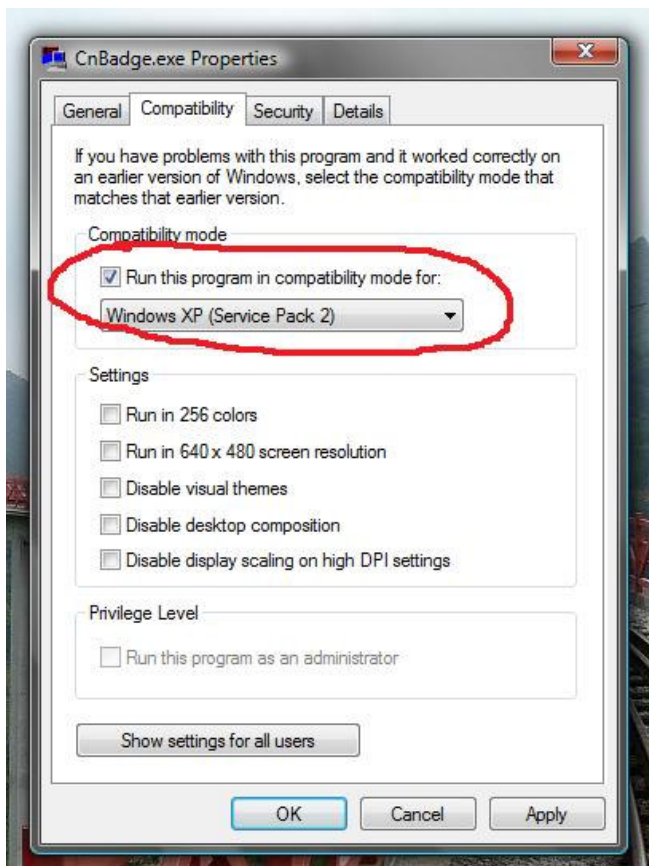

billede 8